

# Kmuun DCM+

# Inteliigent Entry Systerm **User Manual**

v 1.0.1

Indoor Unit



Width: 86 Height: 86 Depth: 13

86 Box (N/I)



Width: < 86 Height: < 86 Depth: > 40 Outdoor Unit



Width: 80 Height: 184 Depth: 19.9 OU Mounting Box



Width: 74 Height: 178 Depth: 19

OU Embedded Box



Width: 68 Height: 172 Depth: 60(mm) Latch Removal



#### Finish

- Anodized Aluminum Alloy
- · Tempered Glass

#### Installation

Embedded Wall Mount

#### Storage

- 360 Keys
- 100 Event Logs

- · 6 to 8-digit passcode
- 20-digit pseudo passcode
- RFID Card Induction

- · Verification Time: < 1 s
- FRR: < 1 %
- FAR: 1 / 100000
- Resolution: 508 DPI
  - Auto-update

- · Independent control
- Induction distance: 2 ~ 3 m
- Duration: 30 s

12 ~ 24 V ±10% DC

#### Wireless

Bluetooth 4.2

#### Operating Environment

- RH(Non-cond):40 % ~ 90 %
- Temp: -20 °C ~ 55 °C

#### Storage Environment

- RH(Non-cond):40 % ~ 60 %
- Temp: 15 °C ~ 55 °C

#### Voice Guidance

- English

Kmuun APP




- Kev Management
- Bluetooth Unlocking
- Event Log
- Temporary Passcode
- Device Sharing

- Indoor Unit
- Outdoor Unit
- Cables
- Pin
- User Manual


### Firmware

• DCMP-A201-100


### 安装示意图

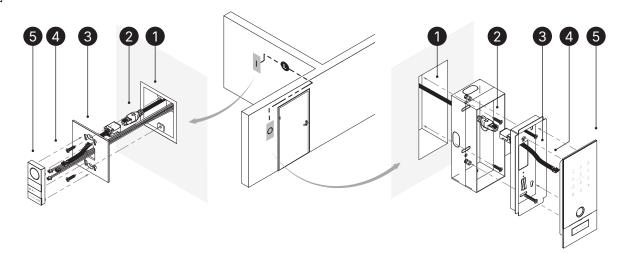

- Once the installation positions are determined, pre-install the conduit and secure the "embedded box" with screws in the prepared hole.
- For proper operation, pipeline length L: < 10 m (required).
- 2 Wire the cables according to the diagram and usage requirements.

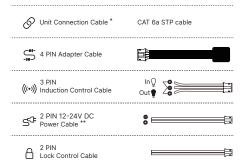

 
- \* Connect the CAT 6a head using the T568A standard \*\* - Use a 24V DC power source for long-distance supply
- 3 Fix the "IU panel" to the "86 box" and the "OU mounting box" to
- the "OU embedded box" using four M4 x 40 flat-head screws.
- 4 Complete the wiring operation according to the following wiring diagram.
- (I) Indoor Unit
- O Outdoor Unit




(5) If the power-on test is normal, fix the "indoor unit" to the "IU mounting panel" and the "outdoor unit" to the "OU mounting box." (6) Disassemble the Outdoor Unit.



- - Connect the product before turning on the power and strictly follow the wiring diagram to connect the product.
  - After installation, power up the device. In case the product does not operate normally, immediately cut off the power and recheck the wiring.
  - If the product still fails to function after rechecking, please contact a professional technician for technical support.
  - For system operating on 12/24V DC, the combined power of all lights must NOT exceed 20/40 W.
  - To install higher-power lights, it is advise to control the opening and closing
    of high-power lights by connecting to a separate power and relay.

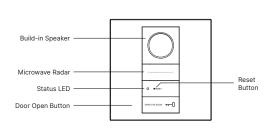

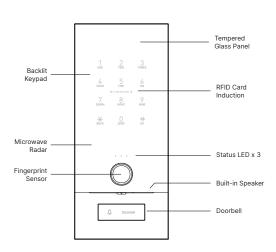


#### **Local Features Operation Instructions**

When you first power on the device, follow the prompts to select the system language. The device will then enter 'Setup Mode' automatically.

To enter the voice-guided configuration menu, short-press the 'Reset Button' on the indoor unit with a pin or press the "Star (\*) Key + Hash (#) Key" on the outdoor unit.

 In factory mode, this menu is directly accessible. Otherwise administrator verification is required.






1 Add Admin 2 Add User 3 Add One-time Passcode 4 Delete Key 5 System Setting

#### 1 / 2 Add Admin/User

 Please Set Up (Admin) Fingerprint, Passcode, RFID Card.



Fingerprint: Place your finger on the fingerprint sensor. Follow the voice prompt and repeat the process until you hear 'Key XXX, Setup succeeded.' Mistakes or interruptions may cause the setup to fail.

Passcode: Enter a 6 to 8-digit passcode on the keypad, and follow the voice prompt to enter it twice till it says 'Key XXX, Setup succeeded.' Inconsistent or too simple passwords will cause the setup to fail.

RFID Card: Place the card above the sensor. If you hear 'Key XXX, Setup succeeded, the card is set.

Failure: Key capacity full, existing key, or non-compliant keys will cause the setup to fail.

### 3 Add One-time Passcode

### Please Set Up One-time Passcode

Enter a 6 to 8-digit passcode on the keypad, and follow the voice prompt to enter it twice until you hear 'Key XXX, Setup succeeded.' This passcode is only for one-time use and cannot be set as the same one-time passcode or passcode

#### 4 Delete Key

Delete User by Key Delete User by ID Clear One-time 4 Passcode Clear User 5 Toggle Temporary Password Feature

Choose an option to delete. Entering an incorrect key ID or delete an unconfigured key will cause the failure. And you can not delete the last admin key

Temporary Passcode Feature must be configured by KMUUN APP firstly. Then the device can toggle this feature.

### 5 System Setting

(1) 1 Set Language 2 Set Volume 3 Set Lighting 4 Reset Factory Mode 5 Get Device Infomation



〔》 English, 中文

### 2 Set Volume

(1) 1 Ringtone 2 Prompts 3 Toggle Keypad Sound

After press '1' or '2,' feedback prompt sounds will be played. Repeat press until the appropriate feedback volume is reached to complete the setting. When disabled keypad sound, feedback from pressing the keypad will be indicated by backlight flash

### 3 Set Lighting

1 Toggle Indoor Auto Lighting 2 Toggle Outdoor Auto Lighting 3 Toggle Auto Keypad Backlight

Press '1' or '2' to toggle the indoor or outdoor auto lighting function. The 'Keypad Auto Backlight' enables the keypad to light up when

4 Reset Factory Mode

(1) Sure to reset Factory Mode?

the proximity sensing is triggered.

After the voice prompt, press the HASH to confirm. Once you hear 'Factory Mode', the reset is complete.



(b) Version #####

Provide this information to the staff when troubleshooting or reporting issues with the device.

### Accessibility Features

### Force Reset to Factory Mode:

Use the pin to press and hold the 'Reset Button' for about 6 seconds until you hear 'Sure to reset Factory Mode?' Then release the button. After pressing the HASH, wait a moment for the device to reset to factory mode. Please note that no key is required to unlock under factory mode. Remember to setup the device promptly.

After 6 times failures, the system will enter 'Frozen Mode.' During this time, the 'Outdoor Unit' will not accept any commands and will voice prompt 'System Frozen, Please try again later,' Device will automatically back to normal after 3 minutes of inactivity.

## Status LED Infos

Mode	In	Out	Note
Factory	G●	0 9 9	Slow   Gradual
Frozen	R 🏶		Fast   All Fast
Error	R •	• • •	Static   All Solid
Setup			Slow   Mid Slow
Pending Verif	Y 🏶	• • •	Fast   Mid Fast
Syncing	G 🏶	• • •	Fast   Cycling
Door Open			Solid   On 2s
Fault		<b>● ● ●</b> ×2	Solid   Blinking X2
Reset Confirm			Slow   All Slow
Unknown/Out	•	• • •	Off   All Off

### Notes

- Before use, read all instructions. Damages from non-compliance are not covered by the warranty.
- Use only manufacturer-specified accessories.
- Avoid forcefully disassembling to prevent damage.
- Keep away from water or splashing environments
- Do not clean the fingerprint sensor with sharp objects or corrosive liquids
- Maintain cleanliness to prevent surface damage.
- Clean with a soft cloth and water.
- Set up the device immediately after installation
- Keep the admin password confidential.
- If the RFID card is lost, reset the device and set up new keys.

# Warranty

- This product's after-sales service strictly follows the "Consumer Protection Law of the People's Republic of China" and the "Product Quality Law of the People's Republic of China," with the following
- Within one year from the day after you receive the product, if any performance failure listed in the "Product Performance Fault List" occurs, the product will be repaired free of charge based on the warranty type after being inspected and confirmed by the KMUUN Service Center
- For damages not covered by the warranty or caused by human factors, the KMUUN Service Center can still provide repair support, but a repair fee will be charged according to the actual condition of